

CARAVAN BRACKETS

FITTING MOUNT BRACKETS TO CARAVAN BUMPER BAR

A minimum of approx. 200mm is normally required from back of the van to outer rearward face of the caravan bumper for mounting the folded trailer.

Bolt caravan brackets at approx. 110cm apart or 250mm either side of caravan spare wheel if fitted.

Drop in rear drawbar (biggest box section) with the 3 dot end to LHS bracket. Leave approx 30-50mm protruding thru LHS bracket.

Slide in the front drawbar through the rear drawbar.

Leave enough box section exposed at LHS to fit the winch post base and line up pin hole.

Slide in the hitch coupling and secure both with pin.

Loop chain in circle around top of coupling and secure with shackle.

Fit the angled rear roller to RHS end of drawbar and secure with pin.

Drop in the large axle section on top of the drawbar.



Axle shown mounted horizontally, You can also mount it vertically.



Kedron c/van with toolbox. Customer extended c/van brackets to suit.

PTO

CARAVAN BRACKETS

FITTING MOUNT BRACKETS TO CARAVAN BUMPER BAR

A minimum of approx. 200mm is normally required from back of the van to outer Rearward face of the caravan bumper for mounting the folded trailer.

Bolt caravan brackets at approx. 110cm apart or 250mm either side of caravan spare wheel if fitted.

Drop in rear drawbar (biggest box section) with the 3 dot end to LHS bracket. Leave approx 30-50mm protruding thru LHS bracket.

Slide in the front drawbar through the rear drawbar.

Leave enough box section exposed at LHS to fit the winch post base and line up pin hole.

Slide in the hitch coupling and secure both with pin.

Loop chain in circle around top of coupling and secure with shackle.

Fit the angled rear roller to RHS end of drawbar and secure with pin.

Drop in the large axle section on top of the drawbar.



Axle shown mounted horizontally, You can also mount it vertically.



Kedron c/van with toolbox. Customer extended c/van brackets to suit.

PTO

SECURE THE RATCHET STRAPS TO INSIDE OF BRACKETS AS FOLLOWS:

- A) Place the ratchet's fixed hook end into the bottom back hole of the bracket's large box section. Lift the ratchet up and over the axle to hang in front.
- B) Feed the other loose strap with hook attached into slot in ratchet mechanism.
- C) Place the hook under the very bottom of the longest part of the caravan bracket, take up slack and winch tight.




To undo ratchet: Press release button and open ratchet to widest open position.

NOW

Slide wheel with one dot onto RHS bracket. 2 dot wheel to LHS.

At LHS drop in chine slider marked 2 dots into lowest position and secure with pin.

Long end of slider should hang outwards. Mirror this for other wheel at LHS with 1 dot.

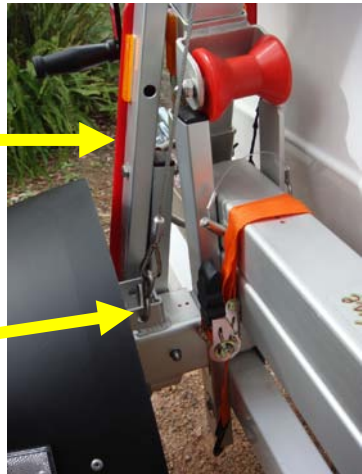

Slide front roller onto winch post and place the winch post into it's housing. Secure with pin.

Pull winch cable down and hook onto wheel bracket. Winch taught. Thread the optional security cable (if purchased) through all components & padlock to bumper.

VERY IMPORTANT:

CHECK ALL PINS ARE IN PLACE AND SECURED WITH "R" CLIPS.

SECURE THE RATCHET STRAPS TO INSIDE OF BRACKETS AS FOLLOWS:

- A) Place the ratchet's fixed hook end into the bottom back hole of the bracket's large box section. Lift the ratchet up and over the axle to hang in front.
- B) Feed the other loose strap with hook attached into slot in ratchet mechanism.
- C) Place the hook under the very bottom of the longest part of the caravan bracket, take up slack and winch tight.




To undo ratchet: Press release button and open ratchet to widest open position.

NOW

Slide wheel with one dot onto RHS bracket. 2 dot wheel to LHS.

At LHS drop in chine slider marked 2 dots into lowest position and secure with pin.

Long end of slider should hang outwards. Mirror this for other wheel at LHS with 1 dot.

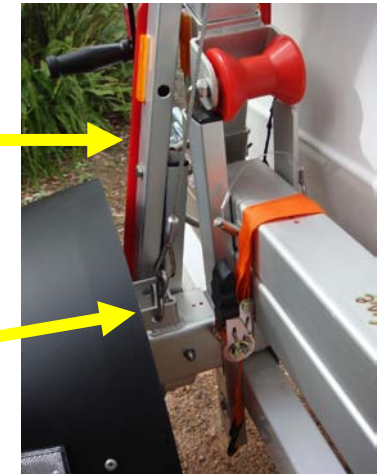

Slide front roller onto winch post and place the winch post into it's housing. Secure with pin.

Pull winch cable down and hook on to wheel bracket. Winch taught. Thread the optional security cable (if purchased) through all components & padlock to bumper.

VERY IMPORTANT:

CHECK ALL PINS ARE IN PLACE AND SECURED WITH "R" CLIPS.

Happy Travels!



Happy Travels!

